


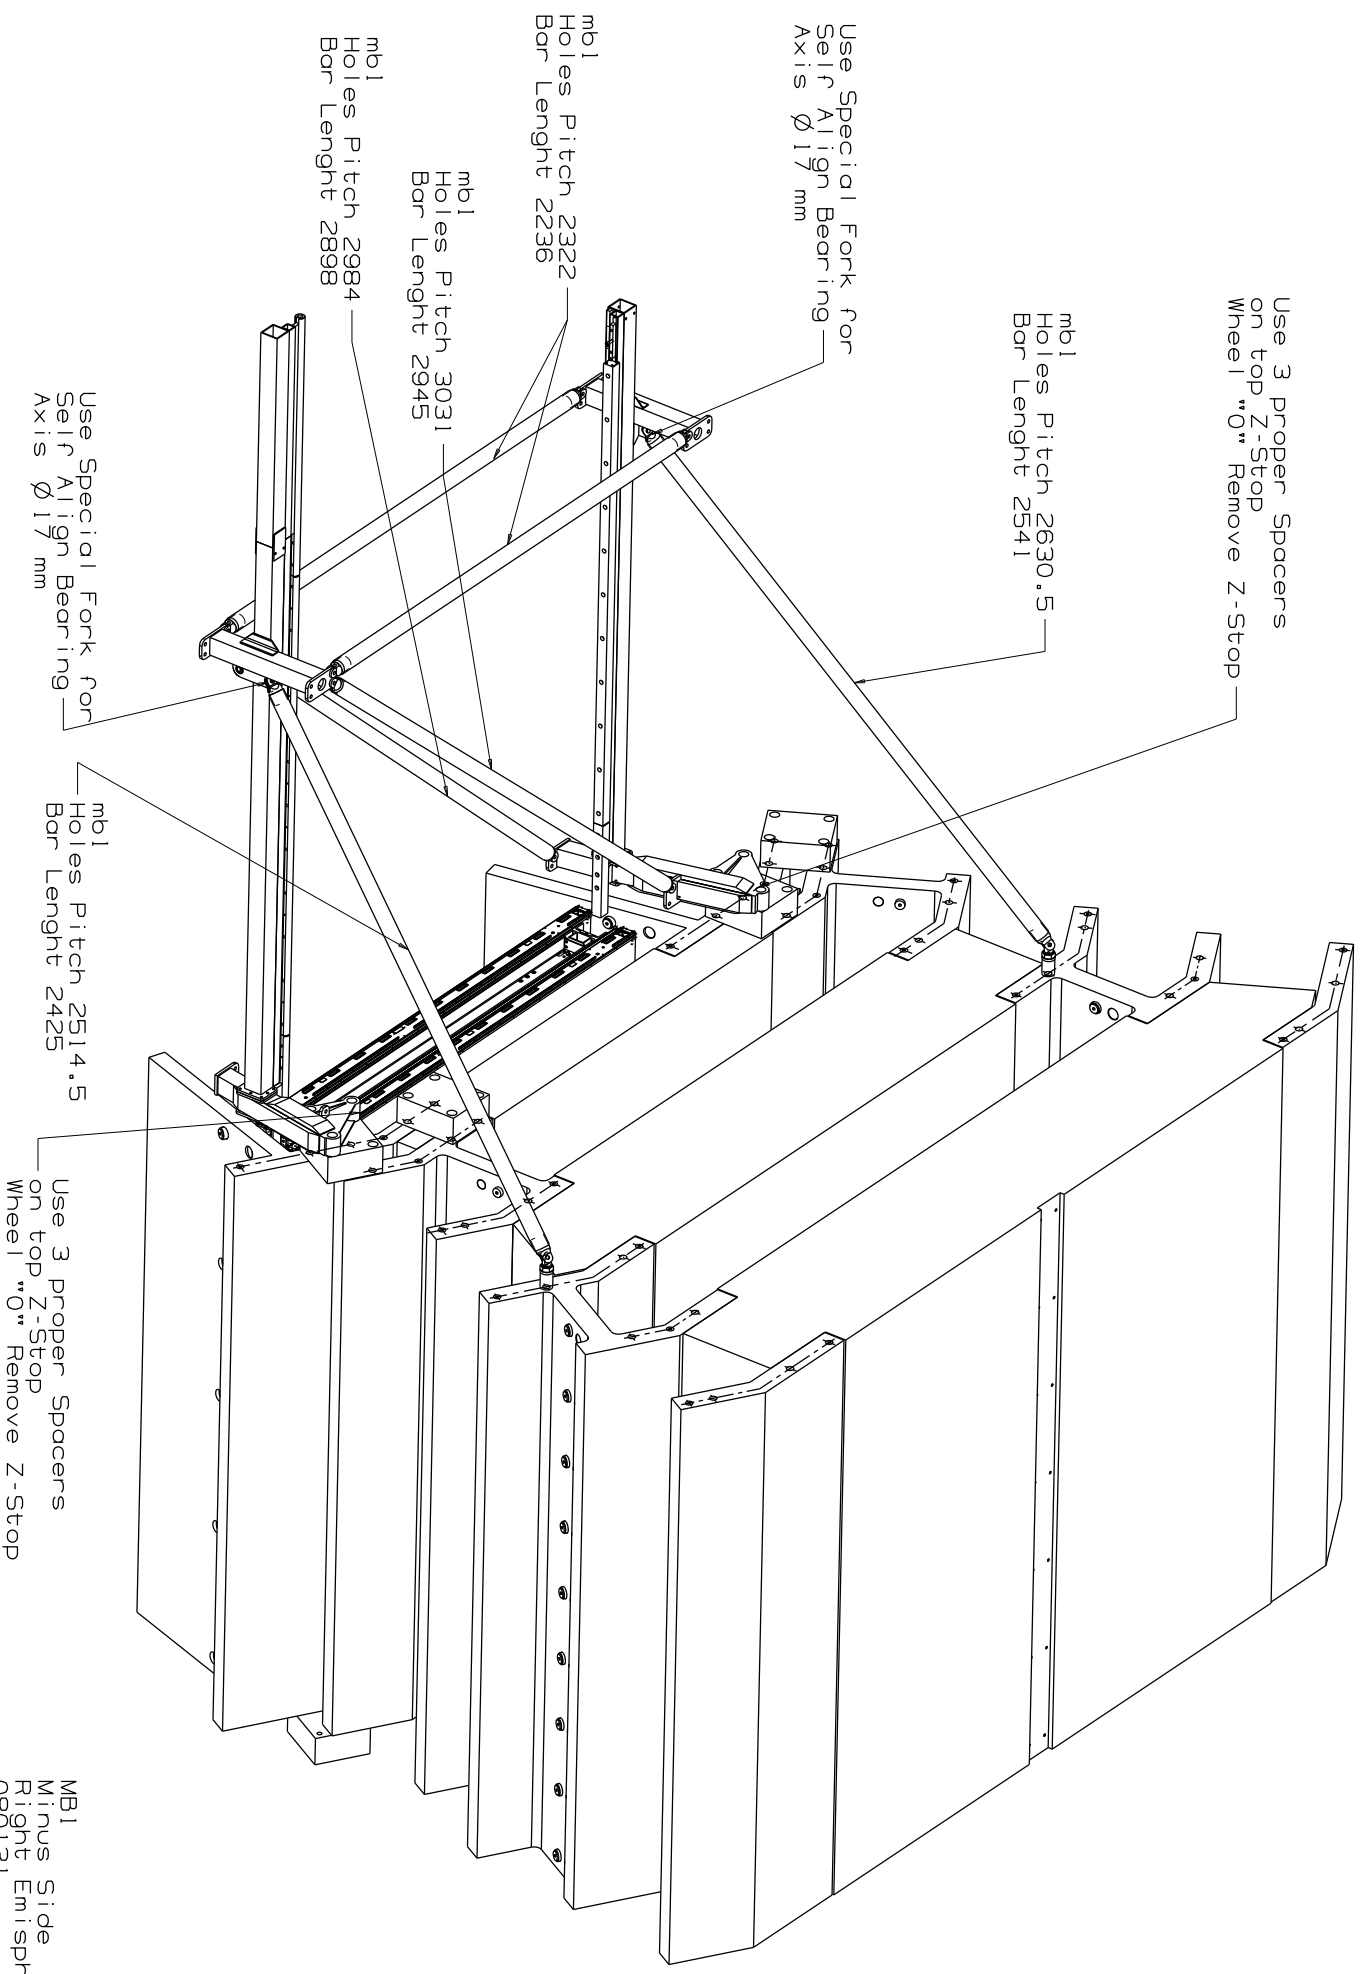

Use 3 proper Spacers
on top Z-Stop
Wheel "0" Remove Z-Stop

mb1
Holes Pitch 2630.5
Bar Length 2541

Use Special Fork for
Self Align Bearing
Axis $\varnothing 17$ mm

mb1
Holes Pitch 2322
Bar Length 2236

mb1
Holes Pitch 3031
Bar Length 2945

mb1
Holes Pitch 2984
Bar Length 2898

Use Special Fork for
Self Align Bearing
Axis $\varnothing 17$ mm

mb1
Holes Pitch 2514.5
Bar Length 2425

Use 3 proper Spacers
on top Z-Stop
Wheel "0" Remove Z-Stop

MB1
Minus Side
Right Emisphere
080131
sect (5,6,7,8,9)